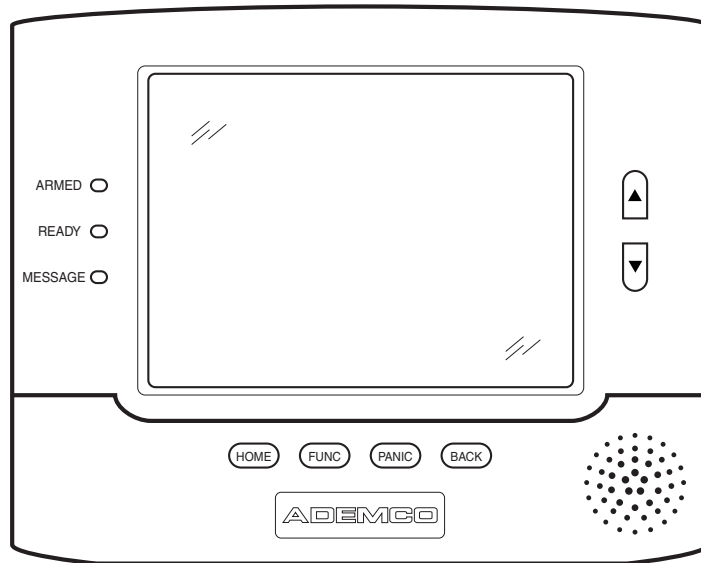


6270

Touch Screen Keypad

User Guide



® ADEMCO

Table of Contents

ABOUT THE 6270.....	5
Introduction to the 6270.....	5
The 6270 Interface	5
Navigating through the 6270.....	6
About Your Home Screen.....	6
6270 "Arming" Screen	8
SYSTEM OVERVIEW.....	10
Introduction to Your System	10
Burglary Protection	10
<i>Partitions</i>	10
<i>Zones</i>	10
<i>Entry/Exit Delays</i>	11
<i>Alarms</i>	11
<i>Memory of Alarm</i>	11
Fire Protection	11
User Codes.....	12
Extended Functionality	12
SECURITY SYSTEM OPERATION.....	13
Introduction to Security System Operation	13
How to Arm the System.....	13
How to Arm Multiple Partitions.....	15
How to Bypass Zones.....	17
How to Remove Bypassed Zones	20
How to Disarm the System	22
How to Check the Status of Other Partitions	24
How to Send Emergency Messages.....	26
How to View the Event Log	27
FIRE ALARM SYSTEM OPERATION.....	29
Introduction to Fire Alarm System Operation.....	29
In Case of Fire Alarm.....	29
Silencing a Fire Alarm	29
Fire Display Lock.....	30
USER CODE SETUP	31
Introduction to User Code Setup	31
How to Access User Setup.....	31

Table of Contents (Cont'd)

How to Add a User	33
How to Delete a User	37
How to Edit a User.....	38
ADVANCED SYSTEM FEATURES	40
Introduction to Advanced System Features.....	40
Console Emulation Mode	40
How to Enter Console Emulation Mode.....	40
VOICE MESSAGES	42
Introduction to Recording and Retrieving Messages	42
Recording a Voice Message.....	42
Retrieving and Deleting a Voice Message.....	43
SUMMARY OF AUDIBLE NOTIFICATION.....	45
SUMMARY OF 6270 LED OPERATION.....	47
6270 LED Operation.....	47
6270 SETUP.....	48
How to Access 6270 Setup Options	48
How to Access Setup	48
How to Adjust the Touch Screen Contrast.....	50
How to Adjust the Volume	51
How to Select Screen Saver Activation Time	52
How to Set the Time and Date.....	54
<i>Time Zones</i>	55
6270 OPERATING MODES	57
Operating Modes	57
How to Access Operating Modes	57
MAINTAINING YOUR SYSTEM.....	59
How to Clean your 6270	59
Routine Care	60
GLOSSARY	61

About the 6270

Introduction

Congratulations on your ownership of an ADEMCO Security System. You've made a wise decision in choosing it, for it represents the latest in security protection technology today.

This security system offers you burglary protection and may provide fire and emergency protection. To realize the full potential of the system, it is important that you feel comfortable operating it. Your system may consist of:

- 6270 Touch Screen Keypad
- One or more other keypads for system control
- Various sensors for perimeter and interior burglary protection, plus a selected number of strategically placed smoke or combustion detectors
- Lighting/switching devices.

UL The home lighting feature has not been evaluated by UL.

The system uses microcomputer technology to monitor all zones, and provides appropriate information for display on the 6270 and/or other keypads used with the system. Your system may also have been programmed to automatically transmit alarm or status messages over the phone lines to a central alarm monitoring station.

The 6270 Interface

The 6270 is an intuitive, graphical interface that combines security and optionally, home lighting control. With clear, simple controls on a touch-screen interface, the entire family will find the 6270 both easy to learn and easy to use.

As a security and home-automation interface, the 6270 may be used for:

- Quick and easy security system operation
- Home lighting control

About the 6270 (cont'd)

Navigating through the 6270

Navigation through the 6270 typically begins from the "Home" screen. This is the 6270's main default screen (starting screen) and is the first screen you will see when the 6270 is powered up and initialized. It is from this screen that you will select from the main menu. Once you have made your selection, you will navigate through various sub-menus by touching buttons or icons to perform the function you desire.

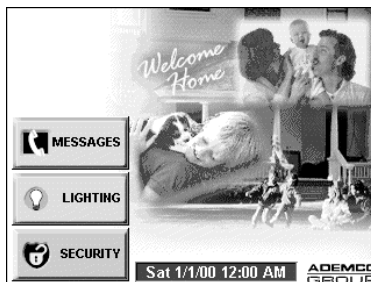
About Your Home Screen

Your "Home" screen is the gateway to your 6270 Touch Screen Keypad. From this screen you can:

- access messages
- control your security system, and optionally,
- control the premises lighting.

UL The home lighting feature has not been evaluated by UL.

Your "Home" screen is displayed at all times, except when the system is armed or you select another screen option.












The background and buttons shown on the "Home" screen in this manual are for example only. Your system installer may have changed the actual background and buttons shown on your "Home" screen.

About the 6270 (Cont'd)

6270 Icon/Button Descriptions

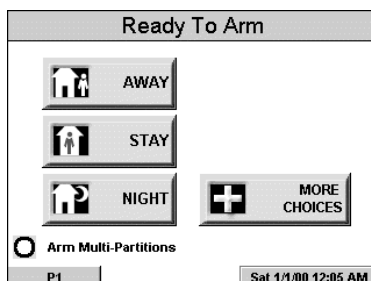
To aid in the navigation of the 6270, a set of user-friendly icons and buttons has been provided. The appearance, function, and location of these icons and buttons is described below:

ICON/BUTTON	LOCATION	FUNCTION
	"Home" screen	Allows you to record and retrieve voice messages.
	"Home" screen	Allows you to turn certain devices on and off (if installed and programmed by your installer.)
	"Home" screen	Accesses "Arming" screen. Note: The lock symbol in the shield indicates security system status. Unlocked – system disarmed Locked – system armed
	Below screen	Returns you to the 6270 "Home" screen.
	Below screen	Reverts to the last screen viewed.
	Below screen	Displays Emergency functions (as programmed by your installer.
	Below screen	For future use.
	To the right of screen	Use to scroll up through lists displayed on the screen.
	To the right of screen	Use to scroll down through lists displayed on the screen.

About the 6270 (cont'd)

6270 "Arming" Screen

From the "Home" screen, press **SECURITY** to access the 6270 "Arming" screen. Use this picture and the table that follows to become familiar with the 6270 security functions.



ITEM	FUNCTION
AWAY	Press this button to arm when no one will be staying on the premises. When armed in AWAY , the system will sound an alarm if a protected door or window is opened, or if any movement is detected inside the premises. You may leave through the entrance door during the exit delay period without causing an alarm. You may also re-enter through the entrance door, but must disarm the system with your User Code within the entry delay period or an alarm will occur.
STAY	Press this button to arm when you are staying home, but might expect someone to use the entrance door later. When armed in STAY , the system will sound an alarm if a protected door or window is opened, but you may otherwise move freely throughout the premises. Late arrivals can enter through the entrance door without causing an alarm, but they must disarm the system within the entry delay period or an alarm will occur.
NIGHT	Press this button to arm when you are staying home and do not expect anyone to use the entrance door. <i>Your installer may have configured NIGHT Mode differently; have him/her describe the actual settings of this mode.</i>

About the 6270 (Cont'd)

ITEM	FUNCTION
Multi-Partitions	Check this circle when you want to arm more than one partition. When Multi-Partitions is checked, all partitions within the system can be armed at one time (if the user is so authorized). When the Arm Multi-Partitions circle does not contain a check mark, each partition must be armed individually.
MORE CHOICES	Press this button for more Security, Lighting, and 6270 setup features.

System Overview

Introduction to Your System

This system offers you burglary protection and may offer fire and emergency protection. Monitoring is accomplished with various contact and motion sensors for perimeter and interior burglary protection, plus the system may have strategically placed smoke, heat, or combustion detectors.

Burglary Protection

The burglary protection portion of your system must be turned on or "armed" before it will sense burglary alarm conditions. Your system provides three modes of burglary protection: Away, Stay, and Night, and even allows you to "bypass" selected zones of protection while leaving the rest of the system armed (e.g. this enables you to arm the system but leave upper-story windows open.)

The system also provides a Chime mode, for alerting users to the opening and closing of doors and windows even while the system is disarmed.

Partitions

This system may be configured to arm and disarm more than one area, each as if it had its own control. These areas are called partitions. Partitions are used when the user wants to disarm certain areas while leaving other areas armed, or to limit access to certain areas to specific individuals. Each user of the system can be authorized to operate all or only some partitions, and can be given different privileges in each. Information about Partitions is presented later in this document.

Zones

Your system's sensing devices have been assigned to various "zones." For example, the sensing device on your Entry/Exit door may have been assigned to zone 01, sensing devices on windows in the master bedroom to zone 02, and so on. These numbers will appear on the display, along with an alpha descriptor for that zone (if programmed), when an alarm or trouble condition occurs.

System Overview (Cont'd)

Entry/Exit Delays

Your system has preset time delays, referred to as exit delay and entry delay. Whenever you arm your system, exit delay gives you time to leave through the designated exit door without setting off an alarm. Exit delay begins immediately after entering any arming command, and applies to all modes of arming protection. If programmed, a slow beeping will sound throughout the exit delay period.

Entry delay gives you time to disarm the system when you reenter through the designated entrance door. But the system must be disarmed before the entry delay period ends, or an alarm will occur. The keypad will beep during the entry delay period, reminding you to disarm the system. Ask your installer about the delay times programmed into your system.

Alarms

When an alarm occurs, the 6270 (and any other keypads) and external sounders will sound, and the zone(s) causing the alarm are displayed. If your system is connected to a central monitoring station, an alarm message will also be sent. To stop the alarm sounding, simply disarm the system.

Memory of Alarm

When an alarm condition occurs, the number(s) of the zone(s) that caused the problem are displayed, along with the type of alarm. These remain displayed until cleared by disarming the system.

Fire Protection

The optional fire protection portion of your security system (if used) is always on and will sound an alarm if a fire condition is detected.

System Overview (cont'd)

User Codes

Each user must be assigned a name with a corresponding 4-digit user code in order to gain access to various features and functions. Users for the system are programmed in a central user setup location that provides the specific questions for authorization level, partition assignment, and RF button assignment.

Extended Functionality

Extended functions are advanced functions that can be accessed through a standard alpha keypad or through emulation mode on your 6270 touch screen. Refer to your Control Panel User Guide for these features.

Security System Operation

Introduction to Security System Operation

You can arm your system in one of three arming modes: Away, Stay, and Night. The following table lists the three different arming modes and the results of each.

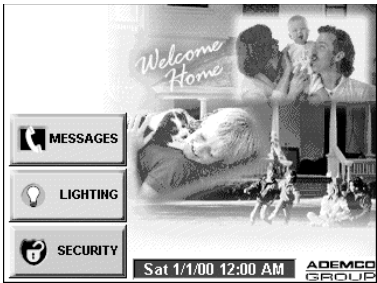
FEATURES FOR EACH ARMING MODE				
Arming Mode	Exit Delay	Entry Delay	Perimeter Armed	Interior Armed
Away	Yes	Yes	Yes	Yes
Stay	Yes	Yes	Yes	No
Night*	Yes	Yes (set for Away or Stay Mode) No (set for Instant or Maximum Mode)	Yes	Yes (set for Away Mode) No (set for Stay, Instant or Maximum Mode)

*Your installer may have configured Night Mode differently; have your installer write the actual mode settings above.

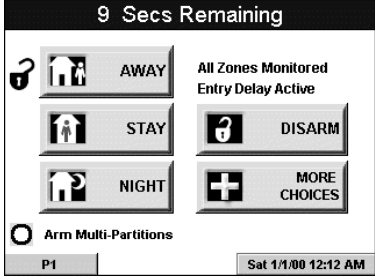
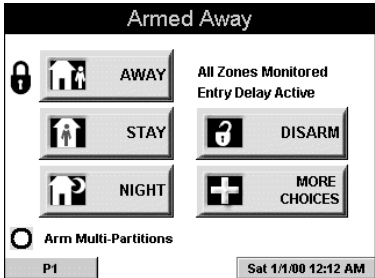
How to Arm the System

Arming the system in any mode is performed in the same way, as described below.

Note: Close all perimeter windows and doors before arming.

SCREEN	ACTION
	<ol style="list-style-type: none"> From the "Home" screen, press the SECURITY button. The "Arming" screen is displayed.

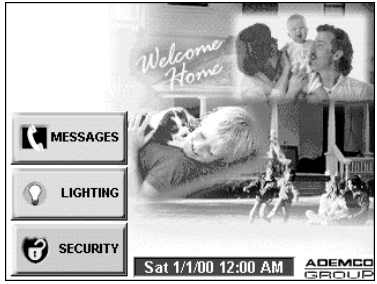
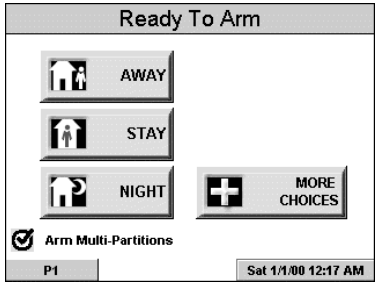
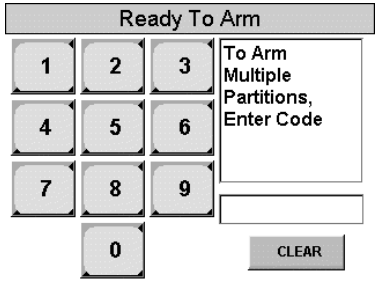
Security System Operation (cont'd)

SCREEN	ACTION
 <p>9 Secs Remaining</p> <p>AWAY All Zones Monitored Entry Delay Active</p> <p>STAY DISARM</p> <p>NIGHT MORE CHOICES</p> <p>Arm Multi-Partitions</p> <p>P1 Sat 1/1/00 12:12 AM</p> <p>Arming (typical)</p>  <p>Armed Away</p> <p>AWAY All Zones Monitored Entry Delay Active</p> <p>STAY DISARM</p> <p>NIGHT MORE CHOICES</p> <p>Arm Multi-Partitions</p> <p>P1 Sat 1/1/00 12:12 AM</p> <p>Armed (typical)</p>	<p>2. On the "Arming" screen, press the selected arming button.</p> <ul style="list-style-type: none"> ○ The 6270 beeps twice (Away and Night Maximum Modes) or 3 times (Stay and Night Instant Modes) ○ a DISARM button appears ○ a text message appears stating which zones are arming and whether or not there is an exit delay ○ the screen changes to display the remaining exit delay time, and ○ an "open lock" appears next to the pressed button to indicate the system is arming. ○ The exit delay time continues to decrement to one. <p>When exit delay time expires, the screen automatically changes to indicate the system is "Armed" and the "lock" next to the pressed button changes to a closed lock. The system is now armed in the selected mode.</p>

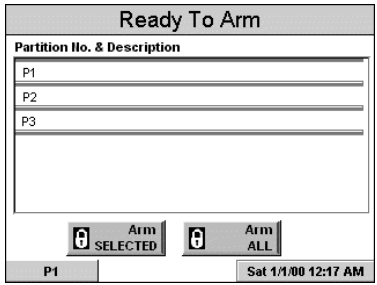
Security System Operation (Cont'd)

How to Arm Multiple Partitions

To arm multiple partitions:

SCREEN	ACTION
 <p>The Home screen features a 'Welcome Home' message, a family photo, and a sidebar with 'MESSAGES', 'LIGHTING', and 'SECURITY' buttons. The bottom status bar shows 'Sat 1/1/00 12:00 AM' and 'ADEMCO GROUP'.</p>	<p>1. From the "Home" screen press the SECURITY button to display the "Arming" screen.</p>
 <p>The 'Ready To Arm' screen shows 'AWAY', 'STAY', and 'NIGHT' modes, along with a 'MORE CHOICES' button. The 'Arm Multi-Partitions' checkbox is checked. The bottom status bar shows 'P1' and 'Sat 1/1/00 12:17 AM'.</p>	<p>2. Make certain the Multi-Partitions button is checked.</p> <p><input checked="" type="checkbox"/> Arm Multi-Partitions</p> <p>3. Press the appropriate arming mode button.</p>
 <p>The 'Ready To Arm' screen displays a numeric keypad (0-9) and a 'CLEAR' button. A text box on the right prompts: 'To Arm Multiple Partitions, Enter Code'.</p>	<p>4. When prompted, enter the user code authorized to access other partition(s).</p>

Security System Operation (cont'd)

SCREEN	ACTION
	<p>If the user code is accepted, the system displays the partitions that the user has access to.</p> <p>Note: A user may have access to some (but not all) of the available partitions! You have two arming options:</p> <p>To arm one or more partitions, highlight the partition(s) to be armed by touching it on the screen, then press ARM SELECTED.</p> <p>Press ARM ALL to arm all available partitions.</p>

Security System Operation (Cont'd)

How to Bypass Zones

The Bypass function is used when you want to arm your system with one or more zones left open. Bypassed zones are unprotected and will not cause an alarm when violated while your system is armed.

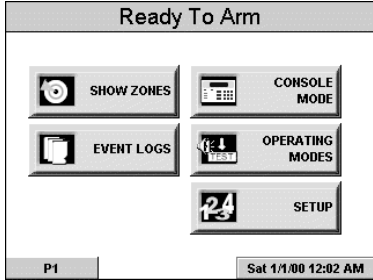
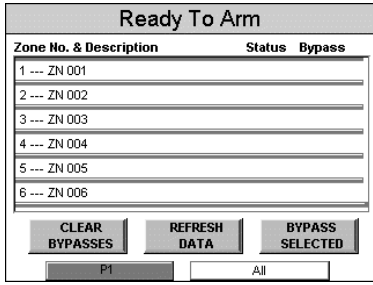
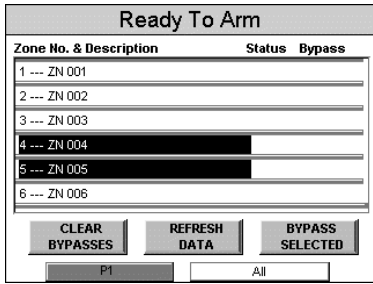


- The system will not allow you to bypass fire or emergency zones.
- To bypass zones, the system must be disarmed first.

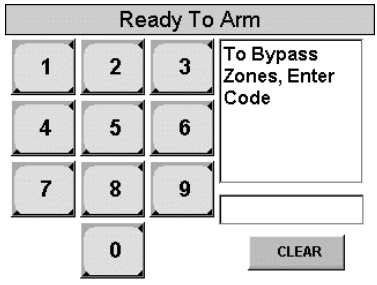
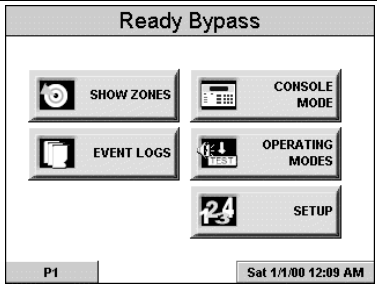
To bypass zones do the following:

SCREEN	ACTION
	<p>1. From the "Home" screen, press the SECURITY button. The "Arming" screen is displayed.</p>
	<p>2. From the "Arming" screen, press the MORE CHOICES button. The "More Choices" screen is displayed.</p>

Security System Operation (cont'd)

SCREEN	ACTION
 <p>Ready To Arm</p> <p>SHOW ZONES CONSOLE MODE</p> <p>EVENT LOGS OPERATING MODES</p> <p>SETUP</p> <p>P1 Sat 1/1/00 12:02 AM</p> <p>Ready To Arm</p> <p>Zone No. & Description Status Bypass</p> <p>Please Wait!</p> <p>CLEAR BYPASSES REFRESH DATA BYPASS SELECTED</p> <p>P1 All</p>	<p>3. Press the SHOW ZONES button on the "More Choices" screen.</p> <p>While the 6270 is requesting and receiving the zone data from the control panel, the screen displays "Please Wait!". Then the zones, along with their current status, are displayed.</p>
 <p>Ready To Arm</p> <p>Zone No. & Description Status Bypass</p> <p>1 --- ZN 001</p> <p>2 --- ZN 002</p> <p>3 --- ZN 003</p> <p>4 --- ZN 004</p> <p>5 --- ZN 005</p> <p>6 --- ZN 006</p> <p>CLEAR BYPASSES REFRESH DATA BYPASS SELECTED</p> <p>P1 All</p>	<p>4. Highlight the zone(s) to be bypassed by touching it on the screen when the zones are displayed.</p>
 <p>Ready To Arm</p> <p>Zone No. & Description Status Bypass</p> <p>1 --- ZN 001</p> <p>2 --- ZN 002</p> <p>3 --- ZN 003</p> <p>4 --- ZN 004</p> <p>5 --- ZN 005</p> <p>6 --- ZN 006</p> <p>CLEAR BYPASSES REFRESH DATA BYPASS SELECTED</p> <p>P1 All</p>	<p>5. Press the BYPASS SELECTED button. The "User Authorization" screen is displayed with the instructions "To Bypass Zones, Enter Code".</p>

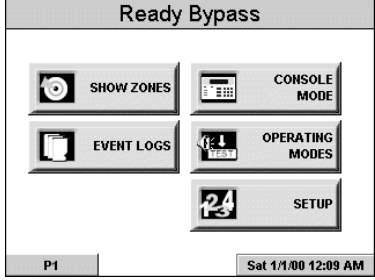
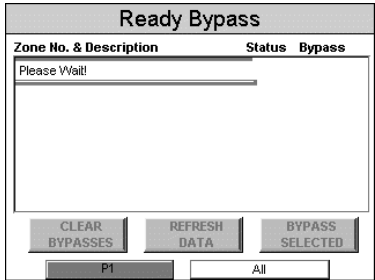
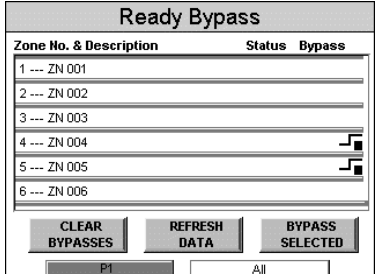
Security System Operation (Cont'd)

SCREEN	ACTION
 <p style="text-align: center;">Ready To Arm</p>	<p>6. Enter your 4-digit user code. The "More Choices" screen is displayed showing the system status as Ready-Bypass</p>
 <p style="text-align: center;">Ready Bypass</p>	<p>7. Press the BACK button to return to the "Arming" screen.</p>

Security System Operation (cont'd)

How to Remove Bypassed Zones

A bypassed zone will automatically be unbypassed when you disarm the system. If the system is disarmed and a zone is bypassed, you can remove the bypass as follows:

SCREEN	ACTION
 	<p>1. View bypassed zones by pressing the SHOW ZONES button.</p> <p>While the 6270 is requesting and receiving the zone data from the control panel, the screen displays "Please Wait!". Then the zones, along with their current status, are displayed.</p>
	<p>2. Remove zone bypasses by pressing the CLEAR BYPASSES button.</p>

Security System Operation (Cont'd)

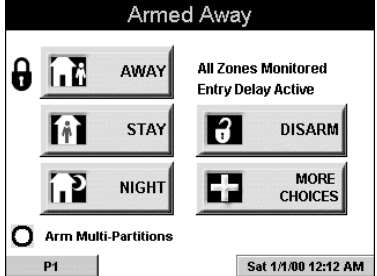
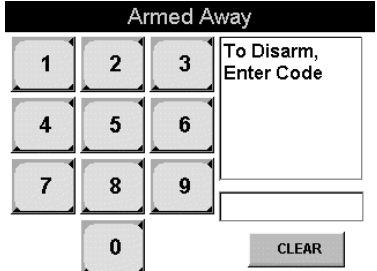
SCREEN	ACTION																			
<div style="border: 1px solid black; padding: 5px;"> <p style="text-align: center; background-color: #cccccc; margin: 0;">Ready Bypass</p> <table style="width: 100%; border-collapse: collapse;"> <tr> <td style="border: 1px solid black; text-align: center; width: 30px;">1</td> <td style="border: 1px solid black; text-align: center; width: 30px;">2</td> <td style="border: 1px solid black; text-align: center; width: 30px;">3</td> <td rowspan="4" style="padding: 5px; vertical-align: top;">To Clear Bypasses, Enter Code</td> </tr> <tr> <td style="border: 1px solid black; text-align: center;">4</td> <td style="border: 1px solid black; text-align: center;">5</td> <td style="border: 1px solid black; text-align: center;">6</td> </tr> <tr> <td style="border: 1px solid black; text-align: center;">7</td> <td style="border: 1px solid black; text-align: center;">8</td> <td style="border: 1px solid black; text-align: center;">9</td> </tr> <tr> <td colspan="3" style="border: 1px solid black; text-align: center;">0</td> </tr> </table> <div style="text-align: right; margin-top: 5px;"> <input style="border: 1px solid black; width: 80px; height: 20px;" type="text"/> <input style="border: 1px solid black; margin-left: 10px; padding: 2px 5px;" type="button" value="CLEAR"/> </div> </div> <div style="border: 1px solid black; padding: 5px; margin-top: 5px;"> <p style="text-align: center; background-color: #cccccc; margin: 0;">Ready To Arm</p> <table style="width: 100%; border-collapse: collapse;"> <tr> <td style="border: 1px solid black; text-align: center; padding: 5px;"> SHOW ZONES</td> <td style="border: 1px solid black; text-align: center; padding: 5px;"> CONSOLE MODE</td> </tr> <tr> <td style="border: 1px solid black; text-align: center; padding: 5px;"> EVENT LOGS</td> <td style="border: 1px solid black; text-align: center; padding: 5px;"> OPERATING MODES</td> </tr> <tr> <td colspan="2" style="border: 1px solid black; text-align: center; padding: 5px;"> SETUP</td> </tr> </table> <div style="display: flex; justify-content: space-between; margin-top: 5px;"> P1 Sat 1/1/00 12:02 AM </div> </div>	1	2	3	To Clear Bypasses, Enter Code	4	5	6	7	8	9	0			SHOW ZONES	CONSOLE MODE	EVENT LOGS	OPERATING MODES	SETUP		<p>3. The "User Authorization" screen is displayed with the instructions To Clear Bypasses, Enter Code.</p> <p>Note: A zone cannot be unbypassed while the system is armed.</p> <p>Enter your 4-digit user code. The "More Choices" screen is displayed showing the system as Ready to Arm.</p> <p>Note: This will not occur if any zone(s) is open (not ready).</p>
1	2	3	To Clear Bypasses, Enter Code																	
4	5	6																		
7	8	9																		
0																				
SHOW ZONES	CONSOLE MODE																			
EVENT LOGS	OPERATING MODES																			
SETUP																				

Security System Operation (cont'd)

How to Disarm the System

IMPORTANT: If you return and the main burglary sounder is on, DO NOT enter the premises, but call the police from a nearby safe location. If you return after an alarm has occurred and the main sounder has shut itself off, the 6270 will beep rapidly upon entering, indicating that an alarm has occurred during your absence. **LEAVE IMMEDIATELY and CONTACT THE POLICE** from a nearby safe location.

Disarm the system as follows:

SCREEN	ACTION
	<p>1. Press the DISARM button on any "Armed" screen. The "User Authorization" screen is displayed with the instructions "To Disarm, Enter Code".</p>
	<p>2. Enter your 4-digit user code. The system will disarm. If you have access to multiple partitions, the Partition No. & Description screen is displayed.</p>

Security System Operation (Cont'd)

SCREEN	ACTION
	<p>3. Press the DISARM ALL button if you wish to disarm the system. The 6270 beeps once and the "Arming" screen is displayed showing the system as Ready to Arm or not ready if any zone is faulted (open).</p> <p>Note: If you wish to disarm only selected partitions, you must first highlight the partition(s) to be disarmed, then press the DISARM SELECTED button. The 6270 beeps once and the "Arming" screen is displayed showing the system as Ready to Arm or not ready if any zone is faulted (open).</p>
	<p>Note: Once the system is disarmed, the 6270 will return to the "Home" screen after the selected "To Home Page After" time has expired. This time is selected on the "Setup" screen.</p>

Security System Operation (cont'd)

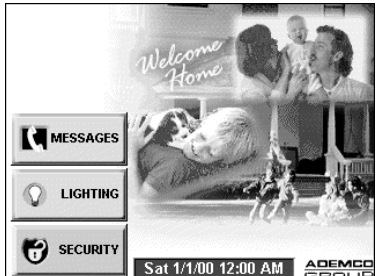
How to Check the Status of Other Partitions

This system supports between one and eight Partitions (as configured by your installer.) Partitioning enables a single physical alarm system to control up to eight areas of protection (partitions) depending on the system you have purchased. Each 6270 and other keypad is assigned a default partition for display purposes, and will show only that partition's information.

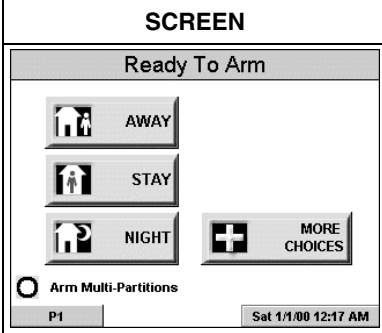
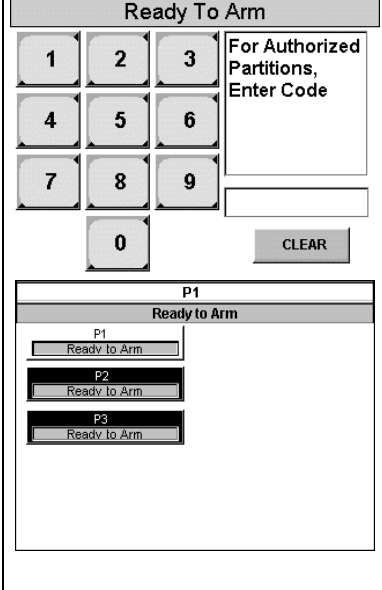
For example, if your physical site is a four-apartment housing unit, your alarm system may be configured with four partitions. Each apartment's zones (door, windows, smoke detectors, etc.) are assigned to separate partitions, giving each apartment independent arming/disarming control of its own partition (area). A landlord or manager may be granted access to all partitions, so he/she can control the entire system.

If a user is so authorized, a 6270 or other keypad in one partition can be used to perform system functions in another partition. (Note that only those partitions authorized and programmed by the installer can be accessed in this manner.)

To check the status of other partitions perform the following:

SCREEN	ACTION
	<ol style="list-style-type: none">1. From the "Home" screen press the SECURITY button to display the "Arming" screen.

Security System Operation (Cont'd)

SCREEN	ACTION
	<p>2. Press the "Current Partition" tab (lower edge of the screen; in this case it displays P1). The "User Authorization" screen is displayed with the instructions "For Authorized Partitions, Enter Code".</p>
	<p>3. Enter the code authorized to access other partition(s). If the code is accepted, the system displays the partitions that user has access to.</p> <p>Note: A code may have access to some (but not all) of the available partitions.</p> <p>This screen displays the available partitions (in this case, Partitions 1, 2, and 3), and their current status.</p> <p>The current partition is shown at the top of the display (in this example, the device is attached to Partition 1 (P1)). To change this assignment, select the appropriate button (e.g. press P2 to switch control to Partition 2).</p>

Security System Operation (cont'd)

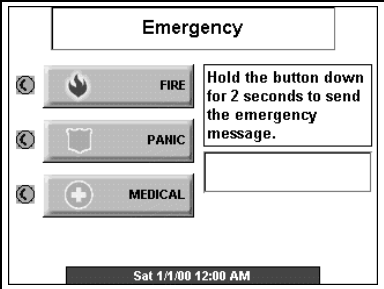
How to Send Emergency Messages



- Emergency messages are optional and may not be available on your system. Ask your system installer if emergency messages are available on your system.
- The **Emergency** screen cannot be accessed while running a diagnostic test.

An emergency message for panic or fire can be sent to the central monitoring station from the **Emergency** screen. The **Emergency** screen can be accessed by activating the "PANIC" button located below the screen.

Once the **Emergency** screen is accessed, perform the following to send an emergency message.

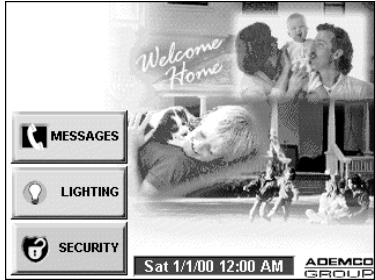
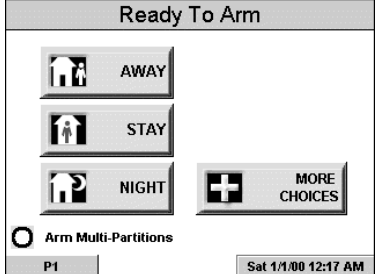
SCREEN	ACTION
 <p>The screenshot shows the 'Emergency' screen with three buttons: 'FIRE' (flame icon), 'PANIC' (shield icon), and 'MEDICAL' (plus icon). To the right of the buttons is a text box containing the instruction: 'Hold the button down for 2 seconds to send the emergency message.' At the bottom, a status bar displays 'Sat 1/1/00 12:00 AM'.</p>	<p>On the Emergency screen press and hold (for at least 2 seconds) the associated alarm button for the type of emergency message you want to send (FIRE, PANIC, or MEDICAL). When the message is sent, the associated "Message Sent" statement is displayed in the text box to the right of the buttons. You are immediately returned to the screen from which you pressed the "PANIC" button.</p>

Security System Operation (Cont'd)

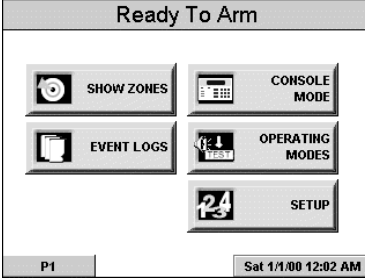
How to View the Event Log

Your system has the ability to record various events in a history log wherein each event is recorded with the time and date of its occurrence. The control panel must be programmed to record various system events in installer programming mode.

To view the Event Log, perform the following:

SCREEN	ACTION
	1. From the "Home" screen, press the SECURITY button. The "Arming" screen is displayed.
	2. From the "Arming" screen press the MORE CHOICES button. The "More Choices" screen is displayed.

Security System Operation (cont'd)

SCREEN	ACTION						
 <p>Ready To Arm</p> <p>SHOW ZONES CONSOLE MODE</p> <p>EVENT LOGS OPERATING MODES</p> <p>SETUP</p> <p>P1 Sat 1/1/00 12:02 AM</p> <p>Ready To Arm</p> <p>Event Log: Total: 0</p> <p>Please Wait!</p> <p>Show More 0</p> <p>All Partitions All Events</p> <p>Ready To Arm</p> <p>Event Log: Showing: 1 - 6 Total:100</p> <table border="1" data-bbox="397 1081 747 1228"> <tr><td>P2 01.01 12:22AM E441 U002</td></tr> <tr><td>P3 01.01 12:22AM E441 U002</td></tr> <tr><td>P1 01.01 12:22AM E441 U002</td></tr> <tr><td>P3 01.01 12:26AM R441 U002</td></tr> <tr><td>P2 01.01 12:26AM R441 U002</td></tr> <tr><td>P1 01.01 12:26AM R441 U002</td></tr> </table> <p>Show More 100</p> <p>All Partitions All Events</p>	P2 01.01 12:22AM E441 U002	P3 01.01 12:22AM E441 U002	P1 01.01 12:22AM E441 U002	P3 01.01 12:26AM R441 U002	P2 01.01 12:26AM R441 U002	P1 01.01 12:26AM R441 U002	<p>3. Press the EVENT LOGS button on the "More Choices" screen. The "Event Log" screen is displayed.</p> <p>Note: While 6270 is requesting and receiving the event log data from the control panel, the "Event Log" screen displays "Please Wait!".</p> <p>To view additional events, press the up/down arrows to scroll through the event log. To view all items, press the Show More button.</p> <p>Note: When All Partitions or All Events button is pressed, and more than 100 events exist, the Show More button text will change to read Next 100.</p>
P2 01.01 12:22AM E441 U002							
P3 01.01 12:22AM E441 U002							
P1 01.01 12:22AM E441 U002							
P3 01.01 12:26AM R441 U002							
P2 01.01 12:26AM R441 U002							
P1 01.01 12:26AM R441 U002							

Fire Alarm System Operation

Introduction to Fire Alarm System Operation

Your fire alarm system (if installed) is on 24 hours a day, providing continuous protection. In the event of an emergency, the installed smoke and heat detectors will automatically send signals to your Control/Communicator, triggering a loud interrupting sound from the keypad. An interrupted sound will also be produced by optional exterior sounders. A FIRE message will appear at your keypad and remain on until you silence the alarm.

In Case of Fire Alarm

1. Should you become aware of a fire emergency before your detectors sense the problem, go to your nearest keypad and manually initiate an alarm by pressing the panic key assigned as FIRE emergency (if programmed by the installer) and hold down for at least 2 seconds.
2. Evacuate all occupants from the premises.
3. If flames and/or smoke are present, leave the premises and notify your local Fire Department immediately.

Silencing a Fire Alarm

1. Silence the alarm by entering your code and pressing the OFF key. To clear the alarm from the display, enter your code and press the OFF key again.
2. If the keypad does not indicate a READY condition after the second OFF sequence, press the READY key to display the zone(s) that are faulted. Be sure to check that smoke detectors are not responding to smoke or heat producing objects in their vicinity. In this case, eliminate the source of heat or smoke.
3. If this does not remedy the problem, there may still be smoke in the detector. Clear it by fanning the detector for about 30 seconds.
4. When the problem has been corrected, clear the display by entering your code and pressing the OFF key.

Fire Alarm System Operation (cont'd)

Fire Display Lock

If several zones produce an alarm before any are silenced, all zones in alarm will scroll. The system can be programmed to lock the keypad display with the first zone that produced an alarm. Ask your installer if your system has been activated with this feature. To display the other zone(s), press the [*] key for each zone. Also the "A", "B", or "C" key may be programmed to scroll the keypad display to view the previous or subsequent fire alarms.

User Code Setup

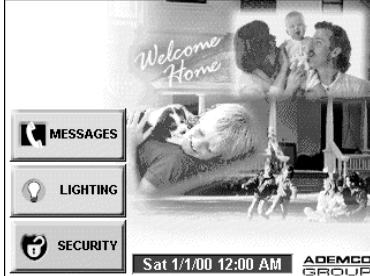
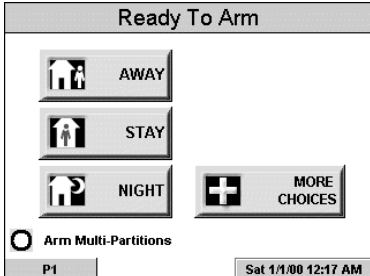
Introduction to User Code Setup

Each user must be assigned a name with a corresponding 4-digit user code in order to gain access to various features and functions.

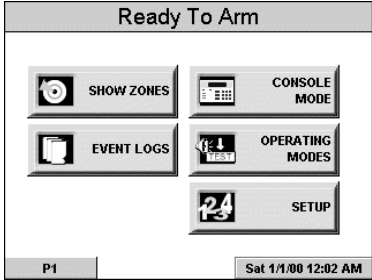
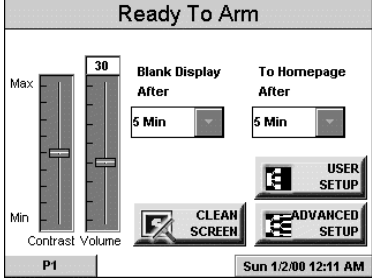
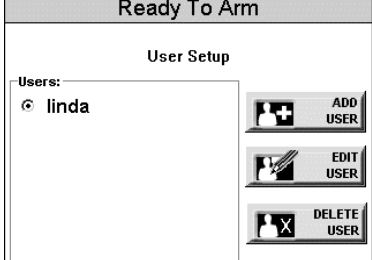
Users for the system are programmed in a central user setup location that provides the specific questions for authorization levels assigned to different users. You may want these users to be the same, but there are situations in which you may want a user to have limited capabilities.

How to Access User Setup

Access User Setup as follows:

SCREEN	ACTION
	1. From the "Home" screen, press the SECURITY button. The "Arming" screen is displayed.
	2. Press the MORE CHOICES button. The "More Choices" screen is displayed.

User Code Setup (cont'd)

SCREEN	ACTION
	<p>3. Press the SETUP button on the "More Choices" screen. The "Setup" screen is displayed.</p>
	<p>4. Press the USER SETUP button on the "Setup" screen. The User Setup screen is displayed.</p>
	

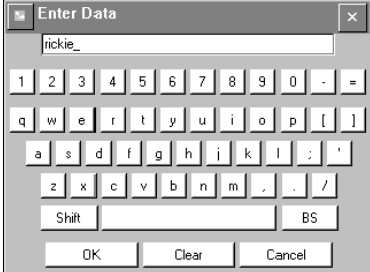
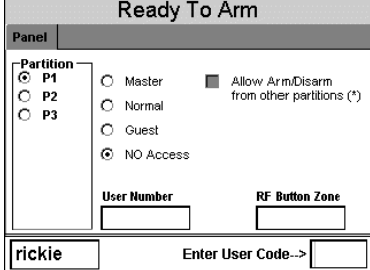
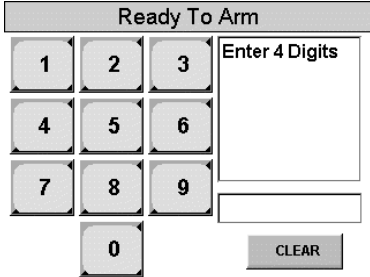
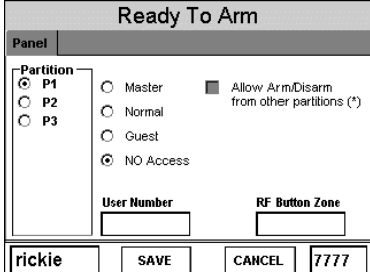
User Code Setup (Cont'd)

How to Add a User

Add a user as follows:

SCREEN	ACTION
<div style="border: 1px solid black; padding: 5px;"> <p style="text-align: center; background-color: #cccccc;">Ready To Arm</p> <p style="text-align: center;">User Setup</p> <p>Users:</p> <div style="display: flex; justify-content: space-between; align-items: flex-start;"> <div style="border: 1px solid black; padding: 2px;"> <input checked="" type="radio"/> linda </div> <div style="text-align: right;"> <div style="margin-bottom: 5px;"> ADD USER</div> <div style="margin-bottom: 5px;"> EDIT USER</div> <div style="margin-bottom: 5px;"> DELETE USER</div> </div> </div> </div>	<p>Note: Three selections are available: add a user, edit a user, or delete a user.</p> <p>1. To add a use, press the ADD USER button. The "User Authorization" screen is displayed with the instructions "Enter Authorized Code".</p>
<div style="border: 1px solid black; padding: 5px;"> <p style="text-align: center; background-color: #cccccc;">Ready To Arm</p> <div style="display: flex; justify-content: space-between;"> <div style="text-align: center;"> <div style="margin-bottom: 5px;"><input type="text" value="1"/></div> <div style="margin-bottom: 5px;"><input type="text" value="2"/></div> <div style="margin-bottom: 5px;"><input type="text" value="3"/></div> <div style="margin-bottom: 5px;"><input type="text" value="4"/></div> <div style="margin-bottom: 5px;"><input type="text" value="5"/></div> <div style="margin-bottom: 5px;"><input type="text" value="6"/></div> <div style="margin-bottom: 5px;"><input type="text" value="7"/></div> <div style="margin-bottom: 5px;"><input type="text" value="8"/></div> <div style="margin-bottom: 5px;"><input type="text" value="9"/></div> <div style="margin-bottom: 5px;"><input type="text" value="0"/></div> </div> <div style="border: 1px solid black; padding: 5px; width: 100px;"> <p style="text-align: center; margin: 0;">Enter Authorized Code:</p> <input style="width: 90%; height: 20px;" type="text"/> </div> </div> <div style="text-align: right; margin-top: 10px;"> <input type="button" value="CLEAR"/> </div> </div>	<p>2. Enter your Authorized code. The "User Options" screen is displayed.</p> <p>Note: The authorized code for adding users is dependent upon the system you have. Check with your system installer to determine who can add users.</p>
<div style="border: 1px solid black; padding: 5px;"> <p style="text-align: center; background-color: #cccccc;">Ready To Arm</p> <p>Panel</p> <div style="display: flex; justify-content: space-between;"> <div style="width: 40%;"> <p>Partition</p> <p><input checked="" type="radio"/> P1</p> <p><input type="radio"/> P2</p> <p><input type="radio"/> P3</p> </div> <div style="width: 55%;"> <p><input type="radio"/> Master <input type="checkbox"/> Allow Arm/Disarm from other partitions (*)</p> <p><input type="radio"/> Normal</p> <p><input type="radio"/> Guest</p> <p><input checked="" type="radio"/> NO Access</p> </div> </div> <div style="display: flex; justify-content: space-between; margin-top: 5px;"> <div style="width: 45%;"> <p>User Number</p> <input style="width: 90%;" type="text"/> </div> <div style="width: 45%;"> <p>RF Button Zone</p> <input style="width: 90%;" type="text"/> </div> </div> <div style="margin-top: 5px;"> <input style="width: 100%;" type="text" value="← Enter User Name"/> </div> </div>	<p>3. Press the box next to Enter User Name. The Enter Data keyboard screen is displayed.</p>




User Code Setup (cont'd)

SCREEN	ACTION
	<p>4. Type in the user name (6 characters max.) and press the OK button. The "User Options" screen is displayed with Enter User Code... displayed.</p>
	<p>5. Touch the box next to Enter User Code... The "User Authorization" screen is displayed with the instructions Enter 4 Digits.</p>
	<p>6. Enter the 4-digit code for this user. The "User Options" screen is displayed with the user's name and code displayed.</p>
	<p>7. Select the partitions and access level for this user. After the access level is selected, the Allow Arm/Disarm from other partitions box becomes available. If this user is to be able to Arm and Disarm from other partitions, touch this box.</p>

User Code Setup (Cont'd)

SCREEN	ACTION													
<div style="border: 1px solid black; padding: 5px;"> <p style="text-align: center; background-color: #cccccc;">Ready To Arm</p> <p>Panel</p> <p>Partition</p> <p><input checked="" type="radio"/> P1 <input type="radio"/> Master <input type="checkbox"/> Allow Arm/Disarm from other partitions (*)</p> <p><input type="radio"/> P2 <input checked="" type="radio"/> Normal</p> <p><input type="radio"/> P3 <input type="radio"/> Guest</p> <p><input type="radio"/> NO Access</p> <p>User Number RF Button Zone</p> <p><input type="text"/> <input type="text"/></p> <p>rickie SAVE CANCEL 7777</p> </div>	<p>8. Touch the box below the User Number. The "User Number" screen is displayed with the instructions to Enter 2 Digits or Enter 3 Digits dependent upon the system you have.</p>													
<div style="border: 1px solid black; padding: 5px;"> <p style="text-align: center; background-color: #cccccc;">Ready To Arm</p> <table style="width: 100%; border-collapse: collapse;"> <tr> <td style="border: 1px solid black; width: 30px; height: 30px; text-align: center;">1</td> <td style="border: 1px solid black; width: 30px; height: 30px; text-align: center;">2</td> <td style="border: 1px solid black; width: 30px; height: 30px; text-align: center;">3</td> <td rowspan="4" style="border: 1px solid black; padding: 5px; vertical-align: top;">Enter 3 Digits</td> </tr> <tr> <td style="border: 1px solid black; text-align: center;">4</td> <td style="border: 1px solid black; text-align: center;">5</td> <td style="border: 1px solid black; text-align: center;">6</td> </tr> <tr> <td style="border: 1px solid black; text-align: center;">7</td> <td style="border: 1px solid black; text-align: center;">8</td> <td style="border: 1px solid black; text-align: center;">9</td> </tr> <tr> <td style="border: 1px solid black; text-align: center;">0</td> <td colspan="2" style="border: 1px solid black; text-align: center;">CLEAR</td> </tr> </table> </div>	1	2	3	Enter 3 Digits	4	5	6	7	8	9	0	CLEAR		<p>9. Enter the 2 or 3-digit user number for this user. The "User Options" screen is displayed with the user's name, number, and code displayed.</p>
1	2	3	Enter 3 Digits											
4	5	6												
7	8	9												
0	CLEAR													
<div style="border: 1px solid black; padding: 5px;"> <p style="text-align: center; background-color: #cccccc;">Ready To Arm</p> <p>Panel</p> <p>Partition</p> <p><input checked="" type="radio"/> P1 <input type="radio"/> Master <input type="checkbox"/> Allow Arm/Disarm from other partitions (*)</p> <p><input type="radio"/> P2 <input checked="" type="radio"/> Normal</p> <p><input type="radio"/> P3 <input type="radio"/> Guest</p> <p><input type="radio"/> NO Access</p> <p>User Number RF Button Zone</p> <p>004 <input type="text"/></p> <p>rickie Enter User Code--> 7777</p> </div>	<p>10. If this user is assigned an RF button zone, touch the box below the RF Button Zone. The "RF Button Zone" screen is displayed with the instructions to enter 2 or 3 digits based on the alarm system being used. Enter the RF Button Zone number.</p> <p>The User Options screen will be redisplayed.</p>													

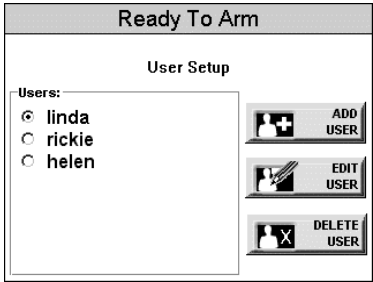
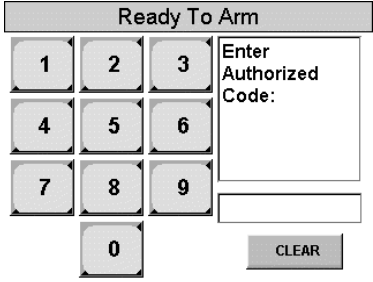
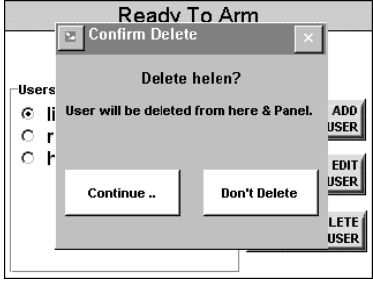
User Code Setup (cont'd)

SCREEN	ACTION
<div style="border: 1px solid black; padding: 5px;"> <p style="text-align: center;">Ready To Arm</p> <p>Panel</p> <p>Partition</p> <p><input checked="" type="radio"/> P1 <input type="radio"/> Master <input type="checkbox"/> Allow Arm/Disarm from other partitions (*)</p> <p><input type="radio"/> P2 <input checked="" type="radio"/> Normal</p> <p><input type="radio"/> P3 <input type="radio"/> Guest</p> <p><input type="radio"/> NO Access</p> <p>User Number: <input type="text" value="004"/> RF Button Zone: <input type="text"/></p> <hr/> <p>rickie Enter User Code--> <input type="text" value="7777"/></p> <hr/> <p style="text-align: center;">Ready To Arm</p> <p style="text-align: center;">User Setup</p> <p>Users:</p> <p><input checked="" type="radio"/> linda <input type="radio"/> rickie</p> <div style="display: flex; flex-direction: column; align-items: flex-end;"> <div> ADD USER</div> <div> EDIT USER</div> <div> DELETE USER</div> </div> </div>	<p>11. Press the SAVE button. The system will save the configuration. When the save is complete, the User Setup screen is displayed with the new user's name shown.</p>


User Code Setup (Cont'd)

How to Delete a User

Delete a User as follows:

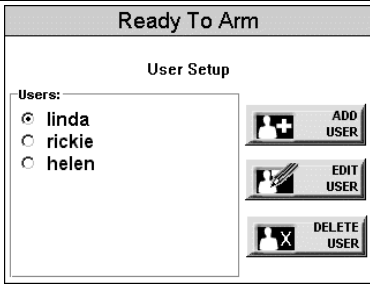
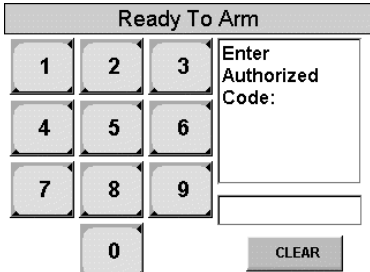
SCREEN	ACTION
	<p>1. From the User Setup screen, touch the circle next to the user to be deleted and press the DELETE USER button. The "User Authorization" screen is displayed with the instructions "Enter Authorized Code:".</p>
	<p>2. Enter your Authorized code. The "User Options" screen is displayed. Note: The authorized code for deleting users is dependent upon the system you have. Check with your system installer to determine who can delete users.</p>
	<p>3. Press the appropriate button. The User Setup screen is displayed.</p>

User Code Setup (cont'd)

SCREEN	ACTION
	

How to Edit a User

Edit a user as follows:

SCREEN	ACTION
	<p>1. From the User Setup screen, touch the circle next to the user to be edited and press the EDIT USER button. The "User Authorization" screen is displayed with the instructions "Enter Authorized Code:".</p>
	<p>2. Enter your Authorized code. The "User Options" screen is displayed. Note: The authorized code for editing users is dependent upon the system you have. Check with your system installer to determine who can edit users.</p>

User Code Setup (Cont'd)

SCREEN	ACTION
<div style="border: 1px solid black; padding: 5px;"> <p style="text-align: center;">Ready To Arm</p> <p>Panel</p> <p>Partition</p> <p><input checked="" type="radio"/> P1 <input type="radio"/> Master <input type="checkbox"/> Allow Arm/Disarm from other partitions (*)</p> <p><input type="radio"/> P2 <input checked="" type="radio"/> Normal</p> <p><input type="radio"/> P3 <input type="radio"/> Guest</p> <p><input type="radio"/> NO Access</p> <p>User Number: <input type="text" value="003"/> RF Button Zone: <input type="text"/></p> <hr/> <p><input type="text" value="linda"/> Enter User Code--> <input type="text" value="1234"/></p> <p style="text-align: center;">Ready To Arm</p> <p style="text-align: center;">User Setup</p> <p>Users:</p> <p><input checked="" type="radio"/> linda <input type="radio"/> rickie <input type="radio"/> helen</p> <div style="display: flex; flex-direction: column; align-items: flex-end;"> <div style="margin-bottom: 5px;"> ADD USER</div> <div style="margin-bottom: 5px;"> EDIT USER</div> <div> DELETE USER</div> </div> </div>	<p>3. Select whatever options you wish to select for this user and press the SAVE button. The configuration changes are saved and you are returned to the User Setup screen.</p>

Advanced System Features

Introduction to Advanced System Features

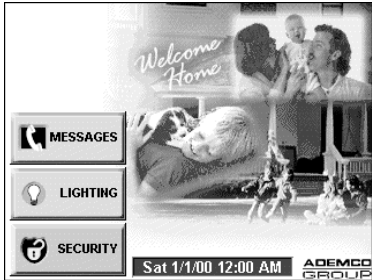
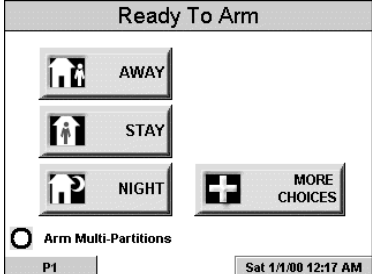
While most of the commonly used security functions are available from the 6270's advanced user interface, there are some less used, advanced features that can either be accessed through Console Emulation mode on the 6270 or a standard alpha keypad. To use features not supported by the 6270, refer to your Control Panel User Guide.

Console Emulation Mode

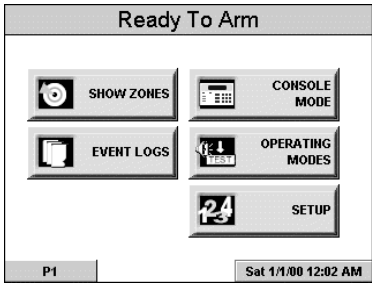

Console Mode allows you to use a 6270 interface just as you would a regular system keypad. All commands shown in Console Emulation mode can also be executed from a standard alpha keypad.

How to Enter Console Emulation Mode

To access the touch screen "Keypad," do the following:

SCREEN	ACTION
	1. From the "Home" screen, press the SECURITY button. The "Arming" screen is displayed.
	2. Press the MORE CHOICES button. The "More Choices" screen is displayed.

Advanced System Features (Cont'd)

SCREEN	ACTION
	<p>3. Press the CONSOLE MODE button on the "More Choices" screen. The "Keypad" screen is displayed.</p>
	<p>4. Perform functions as you would from a regular alpha keypad.</p>

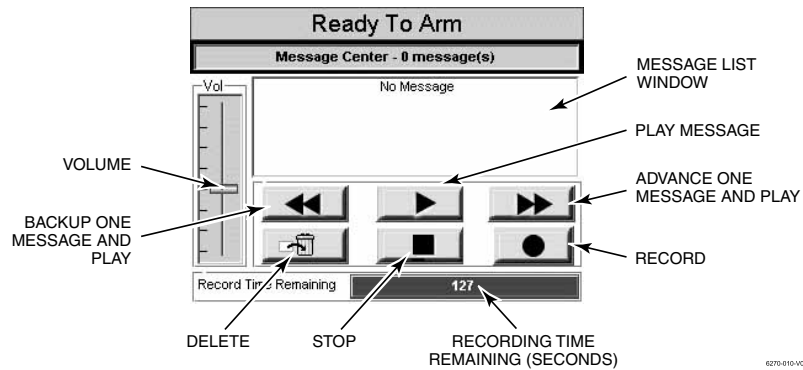
Voice Messages

Introduction to Recording and Retrieving Messages

The 6270 provides the capability of recording voice messages for others on the premises. The number of messages is not limited however; the total time of all messages added together cannot exceed 127 seconds.

Note: The voice messages are stored in the memory of the 6270. *All messages will be lost* if the 6270 loses power or if it is reset.

Voice messages are recorded and retrieved using the "Message Center" screen. The below illustration identifies the various areas and buttons on the "Message Center" screen.



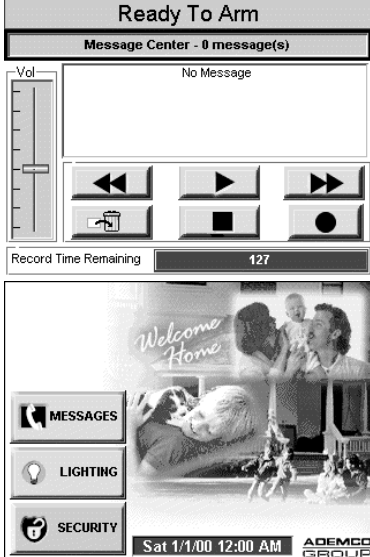
Message Center Screen

Recording a Voice Message

To record a voice message, do the following:


SCREEN	ACTION
	<ol style="list-style-type: none"> From the "Home" screen, press the MESSAGES button. The "Message Center" screen is displayed.

Voice Messages (Cont'd)

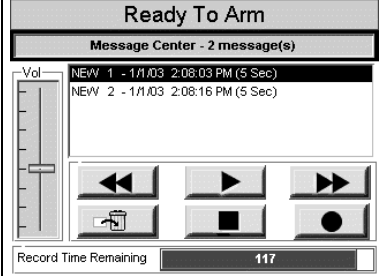
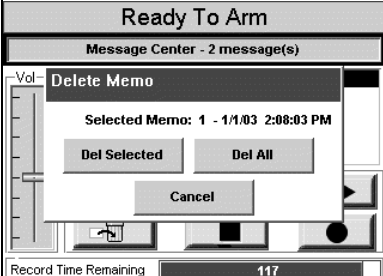

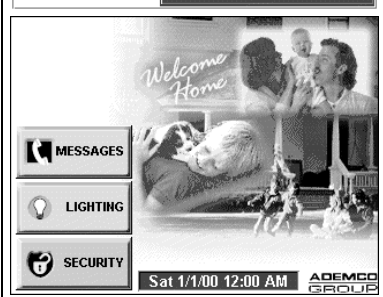
SCREEN	ACTION
	<ol style="list-style-type: none"> 2. Press the Record button and record your message. As you are recording your message, the remaining time counter counts down to indicate the total remaining time available and a "Recording New Memo..." message is displayed above the message list window. 3. Press the Stop button when you are done recording the message. The message indicator will be flashing and the message will be listed in the message list window. 4. To record additional messages, repeat steps 2 and 3 above or to exit, depress the BACK or HOME button and the "Home" screen will be displayed.

Retrieving and Deleting a Voice Message

To retrieve a voice message, do the following:

SCREEN	ACTION
	<ol style="list-style-type: none"> 1. From the "Home" screen, press the MESSAGES button. The "Message Center" screen is displayed.

Voice Messages (Cont'd)

SCREEN	ACTION
	<p>2. Select the message you wish to listen to by touching it in the message list and then pressing the Play Message button. As the message is being played, a “Play (x): Voice Message...” message is displayed above the message list window. When the end of the message is reached, the playback will stop.</p>
	<p>3. To listen to the next message, press the Advance One Message and Play button.</p>
	<p>4. If you wish to delete messages, press the Delete button. The “Delete Memo” screen will be displayed. You can press the Del Selected button to delete only the currently selected message and return to the “Message Center” screen, Del All button to delete all messages and return to the “Message Center” screen, or the Cancel button to return to the “Message Center” screen without deleting any messages.</p>
	<p>5. To exit, depress the BACK or HOME button and the “Home” screen will be displayed.</p>

Summary of Audible Notification

SOUND	CAUSE	DISPLAY
Loud, Interrupted* Keypad & External	Fire Alarm	FIRE is displayed; descriptor of zone in alarm is displayed.
Loud, Continuous* Keypad & External	Burglary/Audible Emergency Alarm	ALARM is displayed; descriptor of zone in alarm is also displayed.
One Short Beep (not repeated) Keypad only	a. System disarm b. System arming attempt with an open zone. c. Bypass verify	a. DISARMED/READY TO ARM is displayed. b. The number and descriptor of the open protection zone are displayed. c. Numbers and descriptors of the bypassed protection zones are displayed (One beep is heard for each zone displayed). Subsequently, the following is displayed: DISARMED BYPASS Ready to Arm
One Short Beep (once every 15 sec.) Keypad only	System is in test mode	Opened Zone identifications will appear.
One Beep (every 60 sec.) Keypad only	Low battery at a transmitter	LO BAT displayed with description of transmitter.
Two Short Beeps Keypad only	Arm Away or Maximum	ARMED AWAY or ARMED MAXIMUM is displayed. Red ARMED indicator is lit.
Three Short Beeps Keypad only	a. Arm Stay or Instant b. Zone opened while system is in Chime Mode. c. Entry warning**	a. ARMED STAY ZONE BYPASSED or ARMED INSTANT ZONE BYPASSED is displayed. Red ARMED indicator is lit. b. CHIME displayed, descriptor of open protection zone will be displayed if the [*] key is pressed. c. DISARM SYSTEM OR ALARM WILL OCCUR is displayed.

Summary of Audible Notification (Cont'd)

SOUND	CAUSE	DISPLAY
Rapid Beeping Keypad only	a. Trouble b. AC power loss alert c. Memory of alarm	a. CHECK displayed. Descriptor of troubled protection zone is displayed. b. AC LOSS displayed (may alternate with other displays that may be present). c. FIRE or ALARM is displayed; descriptor of zone in alarm is displayed.
Slow Beeping Keypad only	a. Entry delay warning** b. Exit delay warning (if programmed)	a. DISARM SYSTEM OR ALARM WILL OCCUR is displayed. Exceeding the delay time without disarming causes alarm. b. ARMED AWAY or ARMED MAXIMUM is displayed along with You May Exit Now

* If bell is used as external sounder, fire alarm is pulsed ring; burglary/audible emergency is steady ring.

** Entry warning may consist of three short beeps or slow continuous beeping, as programmed by your installer.

NOTE: On some systems you may also receive an audible notification of a system battery failure. Check with you system installer to see if this notification applies to your system.

Summary of 6270 LED Operation

6270 LED Operation

The 6270 has three LEDs labeled - ARMED, READY and MESSAGE. MESSAGE LED is yellow, ARMED LED is red, and READY LED is green. Each LED's on and off state has different meanings as described below.

LED	DESCRIPTION
ARMED	ON – Security system is armed. OFF – Security system is not armed.
READY	ON – Security system is disarmed and ready to arm. OFF – Security system is armed or disarmed but not ready. If disarmed, faults or troubles are present.
MESSAGE	FLASHING – The 6270 contains message(s) for the User OFF – No messages.

6270 Setup

How to Access 6270 Setup Options

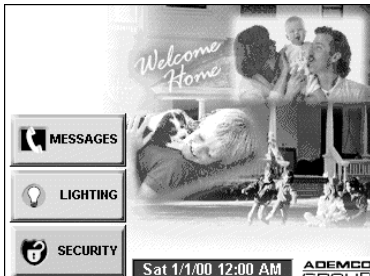
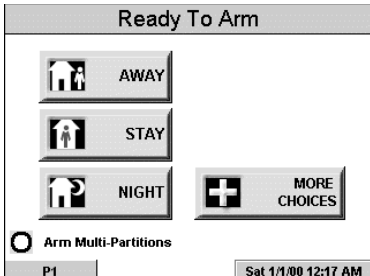
Setup allows you to adjust the touch screen contrast and/or adjust the 6270 speaker volume. You may also select the time interval that must pass prior to the 6270 going into screen saver mode (screen goes blank). Additionally, you may enter the **User Setup** screen, **Advanced Setup** screen (if enabled by your system installer), or **Clean Screen** (maintenance mode) from the "Setup" screen by pressing the corresponding button.



The "Advanced Setup" button will only be active if enabled by your system installer. Ask your system installer to explain the options provided by this button if it is enabled.

How to Access Setup

Access the "Setup" features as follows:

SCREEN	ACTION
	<p>1. From the "Home" screen, press the SECURITY button. The "Arming" screen is displayed.</p>
	<p>2. Press the MORE CHOICES button. The "More Choices" screen is displayed.</p>

6270 Setup (Cont'd)

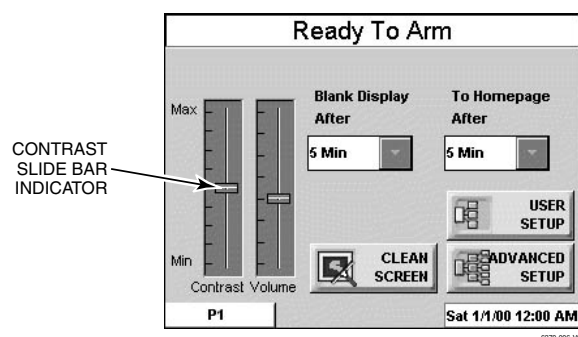
SCREEN	ACTION
	<p>3. Press the SETUP button on the "More Choices" screen. The "Setup" screen is displayed.</p>

6270 Setup (cont'd)

How to Adjust the Touch Screen Contrast

You may adjust the touch screen contrast as follows:

If...	Then...
you want to increase contrast	move the slide bar above the current contrast setting.
you want to decrease contrast	move the slide bar below the current contrast setting.
another adjustment or selection is to be made	go to the corresponding paragraph in this section.
no additional adjustment or selection is to be made	press the "Back" button below the screen to return to the previous screen, or press the "Home" button below the screen to return to your "Home" screen.



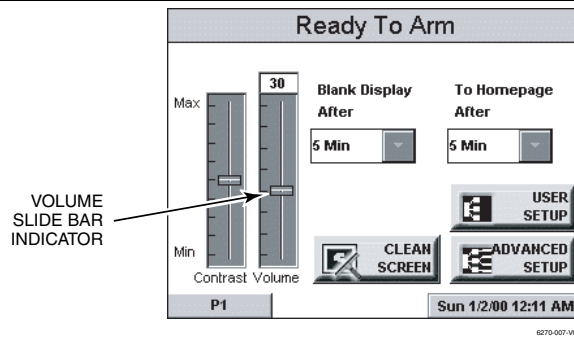
Touch Screen Contrast Control

6270 Setup (Cont'd)

How to Adjust the Volume

You may adjust the 6270 speaker volume by pressing your finger on the touch screen slide bar associated with the "Volume" scale and doing the following:

If...	Then...
you want to increase volume	move the slide bar above the current volume setting.
you want to decrease volume	move the slide bar below the current volume setting.

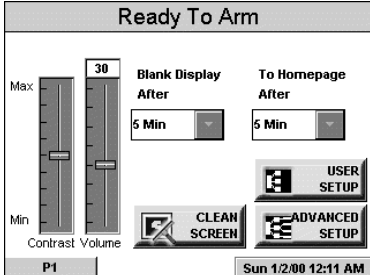
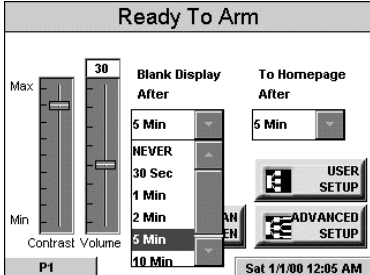


6270 Volume Control

6270 Setup (cont'd)

How to Select Screen Saver Activation Time

When the 6270 is not armed and not active, it will automatically go into screen saver mode (display goes blank) after the selected blank display time has expired (unless never option is selected). To select the screen blank time, do the following:

SCREEN	ACTION
 <p>The screenshot shows the 'Ready To Arm' screen. On the left, there are two vertical sliders for 'Contrast' and 'Volume', with '30' displayed next to the Volume slider. In the center, the 'Blank Display After' menu is open, showing '5 Min' selected. To the right, the 'To Homepage After' menu is also set to '5 Min'. At the bottom, there are buttons for 'CLEAN SCREEN', 'USER SETUP', and 'ADVANCED SETUP'. The status bar at the bottom left shows 'P1' and the bottom right shows 'Sun 1/2/00 12:11 AM'.</p>	<p>1. On the "Setup" screen, press the Blank Display After: "arrow" button. A pop-up window displaying the time period options is displayed.</p>
 <p>This screenshot is similar to the previous one, but the 'Blank Display After' menu is open to a list of options: 'NEVER', '30 Sec', '1 Min', '2 Min', '5 Min', and '10 Min'. The '10 Min' option is highlighted in blue. The 'To Homepage After' menu remains at '5 Min'. The status bar at the bottom right now shows 'Sat 1/1/00 12:05 AM'.</p>	<p>2. Select the time period option you want by pressing it. The pop-up window closes automatically and the selection is displayed in blue.</p> <p>Note: Additional options can be viewed by using the up/down "arrows" to scroll through the time period options.</p>

6270 Setup (Cont'd)

SCREEN	ACTION
	<p>3. Press either the "Home" or "Back" button. A Settings Changed! pop-up window is displayed asking "Settings Changed! Remember New Settings?" Select Yes to save the change or No to discard the change.</p>
	<p>When the Update is complete the 6270 goes to the "Home" screen or "More Choices" screen depending on whether you pressed the "Home" or "Back" button, respectively ("Home" screen shown).</p>

6270 Setup (cont'd)

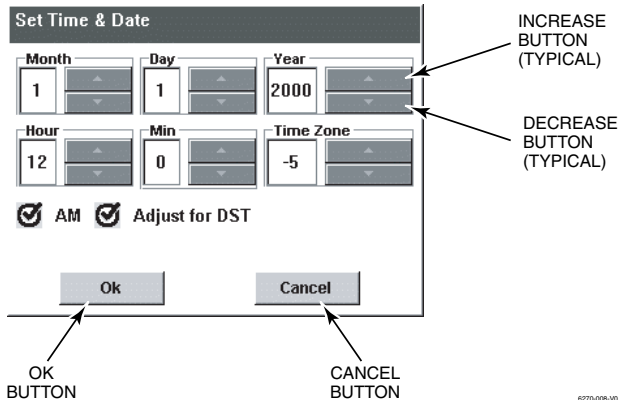
How to Set the Time and Date

You can set the time and date from the **Set Time & Date** screen. Pressing the Time and Date bar located at the bottom of each 6270 screen displays the **Set Time & Date** screen.

- When the time is set it will be stored in the 6270 only. The 6270 will send the time to the control panel every hour. This 1-hour timer starts on 6270 power-up.
- If **Adjust for DST** (Daylight Savings Time) is selected, the 6270 will adjust for Daylight Savings time. When selected, the next time the 1-hour timer expires, the new value will be sent to the control panel.

IMPORTANT: This means that the 6270 setting will override and overwrite the control panel time setting. That is, if the control panel is set to DST and adjusts but the 6270 is not, upon the 1-hour timer expiration, the control panel will be updated to the current time that is not adjusted for DST.

From the **Set Time & Date** screen, adjust either or both the time and date by pressing the increase or decrease arrow buttons as necessary until the proper month, day, year, hour, and minute are displayed.



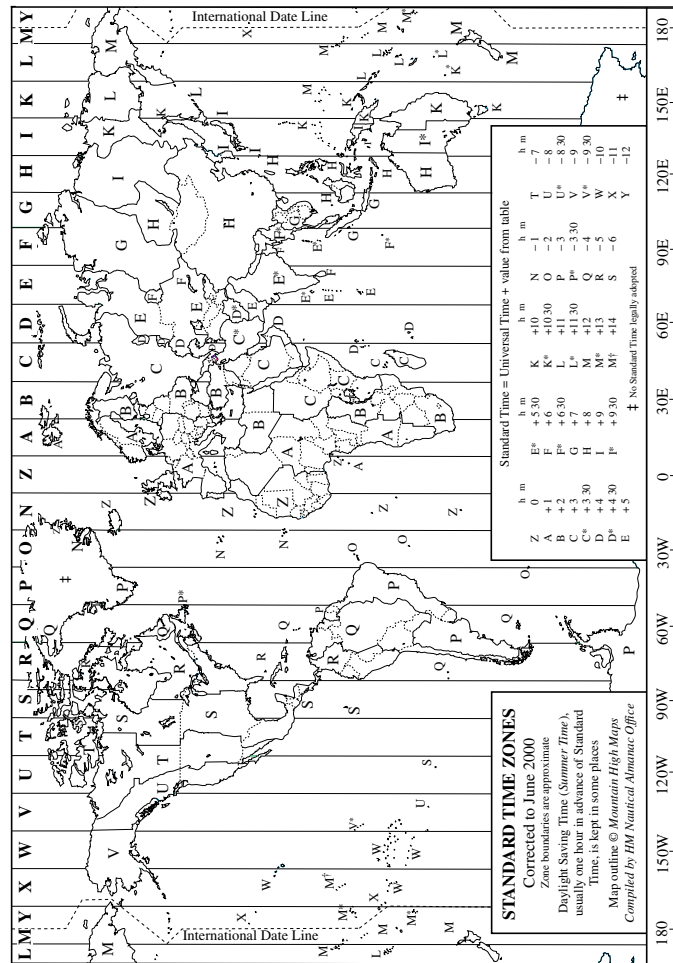
Set Time & Date Screen

6270 Setup (Cont'd)

Time Zones

Using the chart below, select the time zone number corresponding to the location of the installation.

Time Zone Settings



6270 Setup (cont'd)

When all settings have been completed, select **Ok** to save the settings or **Cancel** to discard the settings that have been entered.

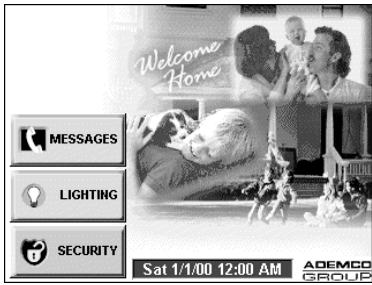
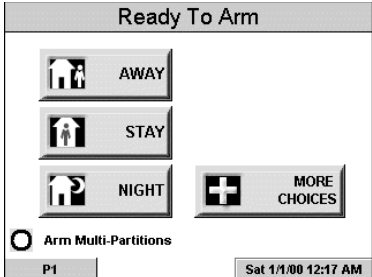
6270 Operating Modes

Operating Modes

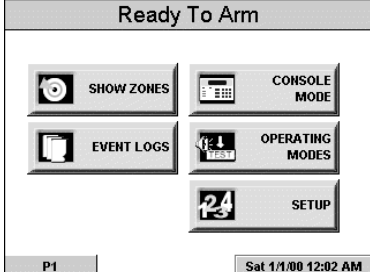
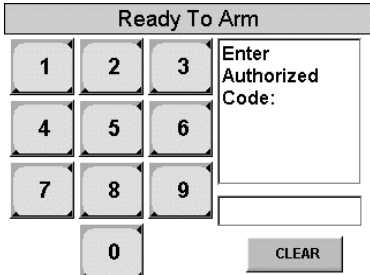
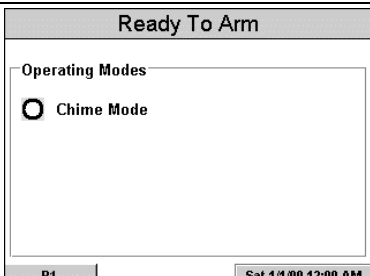
Operating modes allows you to turn the 6270 chime mode on or off. When the chime mode is selected, a request is sent to the alarm panel requesting that the panel chime the 6270 whenever a change in zone status occurs.

How to Access Operating Modes

Access the "Operating Modes" feature as follows:

SCREEN	ACTION
	1. From the "Home" screen, press the SECURITY button. The "Arming" screen is displayed.
	2. Press the MORE CHOICES button. The "More Choices" screen is displayed.

6270 Operating Modes (cont'd)

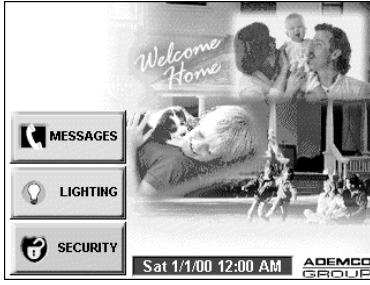
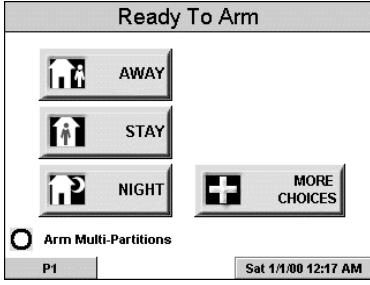
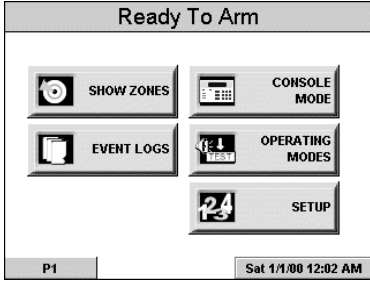
SCREEN	ACTION
	<p>3. Press the OPERATING MODES button on the "More Choices" screen. The "User Authorization" screen is displayed with the instructions "Enter Authorized Code".</p>
	<p>4. Enter your "Master" code. The "Operating Modes" screen is displayed.</p>
	<p>5. Touch the Chime Mode button to turn the Chime Mode on or off. A checkmark appears in the button when the Chime Mode is "ON".</p> <p>Press the "HOME" or "BACK" button after making your selection. When the 6270 exits the "Operating Modes" screen, your selection is saved.</p>

Maintaining Your System

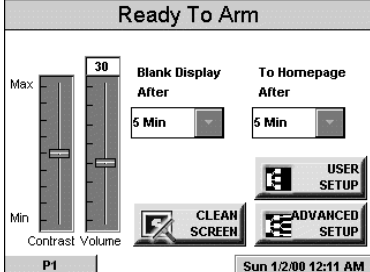
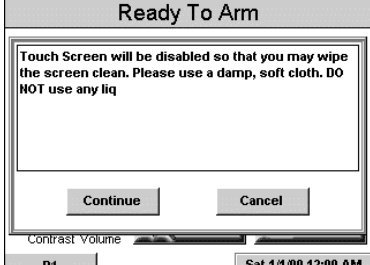
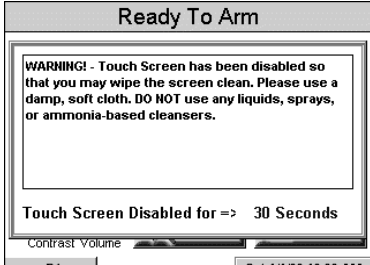
How to Clean your 6270

IMPORTANT: Do not use an abrasive cleaning agent or abrasive cloth when cleaning your 6270 or damage to the touch screen may occur.

Clean the 6270 as follows:

SCREEN	ACTION
	<p>1. From the "Home" screen, press the SECURITY button. The "Arming" screen is displayed.</p>
	<p>2. Press the MORE CHOICES button. The "More Choices" screen is displayed.</p>
	<p>3. Press the SETUP button on the "More Choices" screen. The "Setup" screen is displayed.</p>

Maintaining Your System (cont'd)

SCREEN	ACTION
 <p>Ready To Arm</p> <p>Max 30 Blank Display After 5 Min To Homepage After 5 Min</p> <p>Min Contrast Volume CLEAN SCREEN ADVANCED SETUP USER SETUP</p> <p>P1 Sun 1/2/00 12:11 AM</p>	<p>4. Press the CLEAN SCREEN button. A pop-up window displaying “Touch Screen will be disabled so that you may wipe the screen clean. Please use a damp, soft cloth. DO NOT use any liquids, sprays, or ammonia-based cleansers. Press CONTINUE to disable touchscreen.”</p>
 <p>Ready To Arm</p> <p>Touch Screen will be disabled so that you may wipe the screen clean. Please use a damp, soft cloth. DO NOT use any liq</p> <p>Continue Cancel</p> <p>Contrast Volume</p> <p>P1 Sat 1/1/00 12:00 AM</p>	<p>When the Continue button is pressed the “Touch Screen Disabled for => 30 Seconds” message is displayed. During these 30 seconds the touch screen should be wiped clean of fingerprints using a mild soap solution and a soft cloth. When the counter reaches zero, the window automatically closes and the touch screen is active.</p>
 <p>Ready To Arm</p> <p>WARNING! - Touch Screen has been disabled so that you may wipe the screen clean. Please use a damp, soft cloth. DO NOT use any liquids, sprays, or ammonia-based cleansers.</p> <p>Touch Screen Disabled for => 30 Seconds</p> <p>Contrast Volume</p> <p>P1 Sat 1/1/00 12:00 AM</p>	<p>Note: Do not spray cleaning agent directly on the screen, spray it on cloth then wipe surface area.</p>

Routine Care

- Treat the components of your security system as you would any other electrical equipment. Do not slam sensor-protected doors or windows.
- Keep dust from accumulating on the keypad and all protective sensors, particularly on motion sensors and smoke detectors.

The keypad and sensors should be cleaned carefully with a dry soft cloth. **Do not spray water or any other fluid on the units.**

Glossary

The following terms are used throughout the guide.

Arm/Disarm: “Armed” simply means that the burglary portion of your system is turned ON and is in a state of readiness. “Disarmed” means that the burglary system is turned OFF, and must be rearmed to become operational. However, even in a “disarmed” state, “emergency” and “fire” portions of your system are still operational.

Bypass: To intentionally leave a specific zone unprotected while the rest of the system is armed.

Console Emulation: Console Mode allows you to use a 6270 interface just as you would a regular system keypad. All commands shown in Console Emulation mode can also be executed from a standard alpha keypad.

Day/Night Zone: An area of protection whose violation causes a trouble indication during the disarmed (DAY) mode and an alarm during the armed (NIGHT) mode.

Delay Zone: An area of protection containing doors most frequently used to enter or exit (typically, a front door, back door, or door from the garage into the building). The delay zone allows sufficient time for authorized entry or exit without causing an alarm. Consult your installer for the entry and exit delay times that have been set for your system during installation and record them on the separate sheet provided in this guide.

Home Screen: The screen that is normally displayed on the 6270 when entries are not being made. The 6270 will return to this screen with the “Home” button is pressed or when an entry is not received for a pre-set period of time.

Keypad: This is the device through which you operate your system. It contains numbered pushbuttons similar to those on telephones or calculators. These keys control the arming or disarming of the system, and perform other functions that were previously described in this manual.

Glossary (Cont'd)

Lighting Button: A button on the Home screen that allows you to control lights or other devices if so programmed by your system installer.

Master Code: A 4-digit code that gives users access to all of the system's functions, including the ability to program other users in the system. See also "User Code."

Messages Button: A button on the Home screen that allows you to record and retrieve voice messages.

Night: An arming mode for the system. Your system installer set the type of arming and the zones armed when using this mode.

Partition: An independent group of zones that can be armed and disarmed without affecting other zones or users.

User Code: A 4-digit code that gives users access to the system's basic functions. See also "Master Code."

Zone: A specific protection point (e.g., door or window).

ONE YEAR LIMITED WARRANTY

Honeywell International Inc., acting through its ADEMCO business ("Seller"), 165 Eileen Way, Syosset, New York 11791, warrants its security equipment (the "product") to be free from defects in materials and workmanship for one year from date of original purchase, under normal use and service. Seller's obligation is limited to repairing or replacing, at its option, free of charge for parts, labor, or transportation, any product proven to be defective in materials or workmanship under normal use and service. Seller shall have no obligation under this warranty or otherwise if the product is altered or improperly repaired or serviced by anyone other than the Seller. In case of defect, contact the security professional who installed and maintains your security equipment or the Seller for product repair.

This one year Limited Warranty is in lieu of all other express warranties, obligations or liabilities. THERE ARE NO EXPRESS WARRANTIES, WHICH EXTEND BEYOND THE FACE HEREOF. ANY IMPLIED WARRANTIES, OBLIGATIONS OR LIABILITIES MADE BY SELLER IN CONNECTION WITH THIS PRODUCT, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, OR FITNESS FOR A PARTICULAR PURPOSE OR OTHERWISE, ARE LIMITED IN DURATION TO A PERIOD OF ONE YEAR FROM THE DATE OF ORIGINAL PURCHASE. ANY ACTION FOR BREACH OF ANY WARRANTY, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY, MUST BE BROUGHT WITHIN 12 MONTHS FROM DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL SELLER BE LIABLE TO ANYONE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, OR UPON ANY OTHER BASIS OF LIABILITY WHATSOEVER, EVEN IF THE LOSS OR DAMAGE IS CAUSED BY THE SELLER'S OWN NEGLIGENCE OR FAULT. Some states do not allow limitation on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

Seller does not represent that the product may not be compromised or circumvented; that the product will prevent any personal injury or property loss by burglary, robbery, fire or otherwise; or that the product will in all cases provide adequate warning or protection. Buyer understands that a properly installed and maintained alarm may only reduce the risk of a burglary, robbery, fire or other events occurring without providing an alarm, but it is not insurance or a guarantee that such will not occur or that there will be no personal injury or property loss as a result. CONSEQUENTLY, SELLER SHALL HAVE NO LIABILITY FOR ANY PERSONAL INJURY, PROPERTY DAMAGE OR OTHER LOSS BASED ON A CLAIM THE PRODUCT FAILED TO GIVE WARNING. HOWEVER, IF SELLER IS HELD LIABLE, WHETHER DIRECTLY OR INDIRECTLY, FOR ANY LOSS OR DAMAGE ARISING UNDER THIS LIMITED WARRANTY OR OTHERWISE, REGARDLESS OF CAUSE OR ORIGIN, SELLER'S MAXIMUM LIABILITY SHALL NOT IN ANY CASE EXCEED THE PURCHASE PRICE OF THE PRODUCT, WHICH SHALL BE THE COMPLETE AND EXCLUSIVE REMEDY AGAINST SELLER. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. No increase or alteration, written or verbal, to this warranty is authorized.

ADEMCO

A Honeywell Company

165 EILEEN WAY, SYOSSET, NY 11791

Copyright © 2003 Honeywell International Inc.

www.ademco.com



K0976 4/03